


## SEMICARENADO RETRO PARA - RETRO WINDSCREEN FOR - WINDSCHUTZSCHEIBE RETRO FÜR TRIUMPH BONNEVILLE T100/T120



**Ref.: 9176**  
 (color negro/black colour)







**Ref.: 9195**  
 (símil carbono/carbon look)

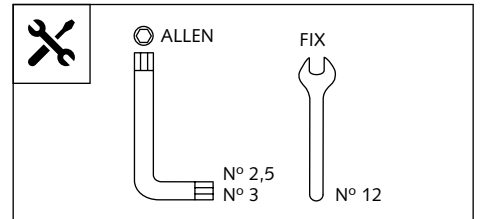

ID.	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY.
1		Cúpula	Screen	1
2		Carcasa ABS	ABS fairing	1
3		Soporte metálico derecho	Right metal support	1
4		Soporte metálico izquierdo	Left metal support	1
5		Silentblock M4	M4 silentblock	5
6		Silentblock M5	M5 silentblock	4
7		Tornillo allen M4x16 ISO 7380	M4x16 ISO 7380 allen screw	5
8		Tornillo allen M5x16 Ø9 ISO 7380	M5x16 Ø9 ISO 7380 allen screw	4
9		Arandela nylon M4x0,5	M4x0,5 nylon washer	5
10		Arandela nylon M5x1mm	M5x1 nylon washer	4
11		Kit adhesivos	Stickers set	1





SEMICARENADO RETRO PARA - RETRO WINDSCREEN FOR - WINDSCHUTZSCHEIBE RETRO FÜR  
**TRIUMPH BONNEVILLE T100/T120**

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

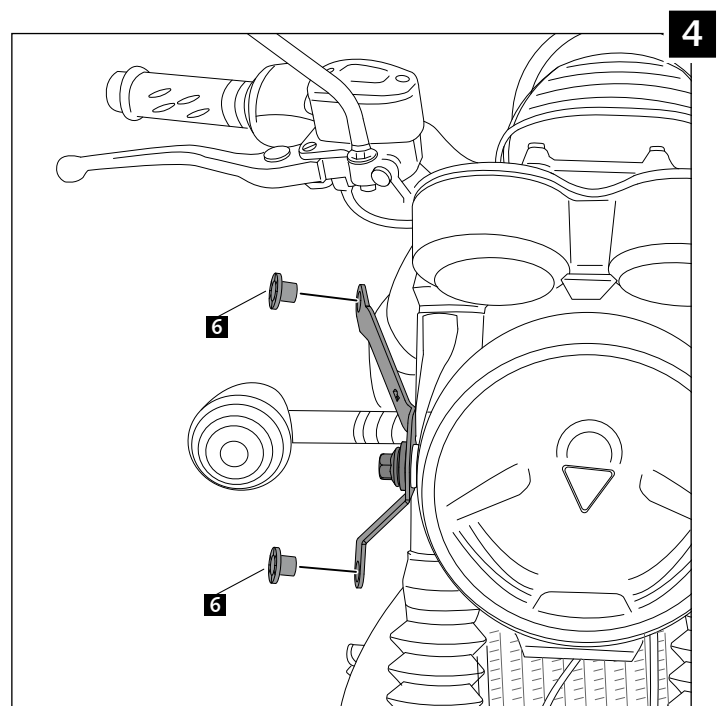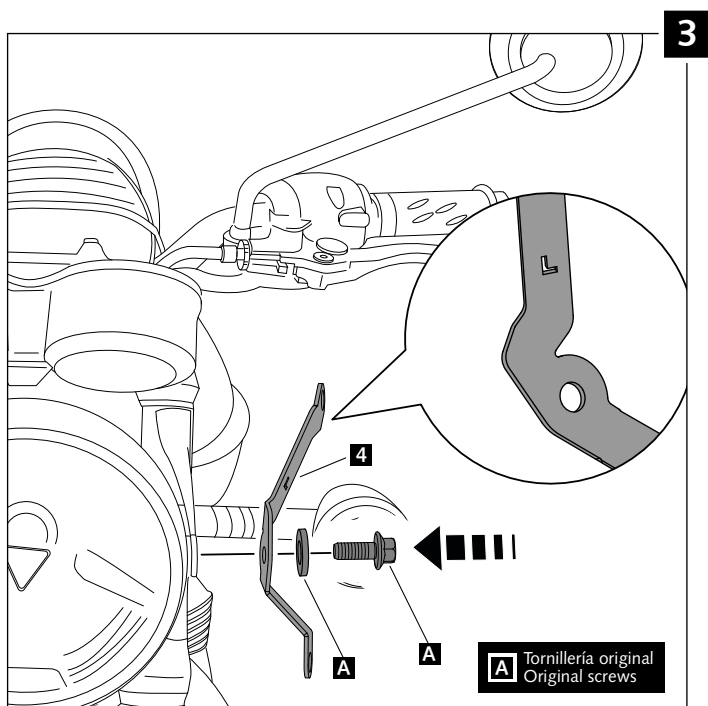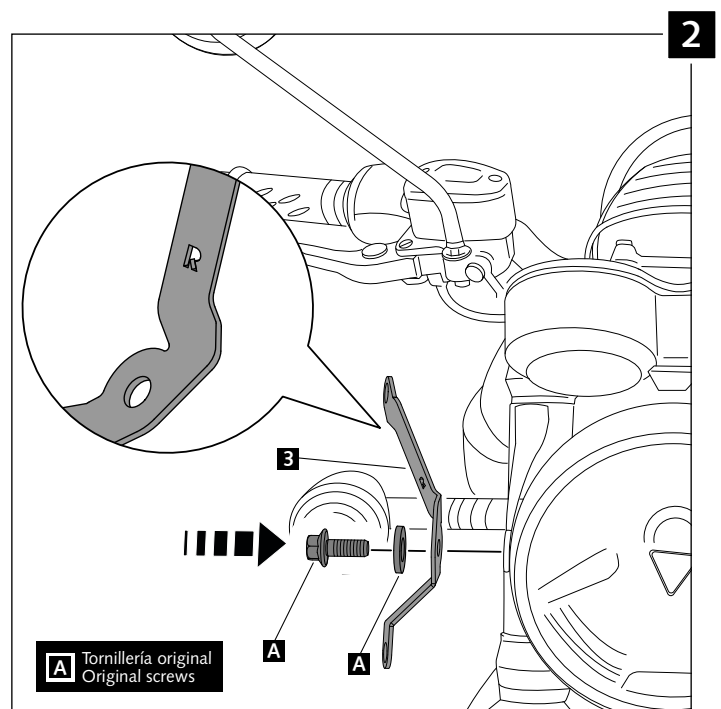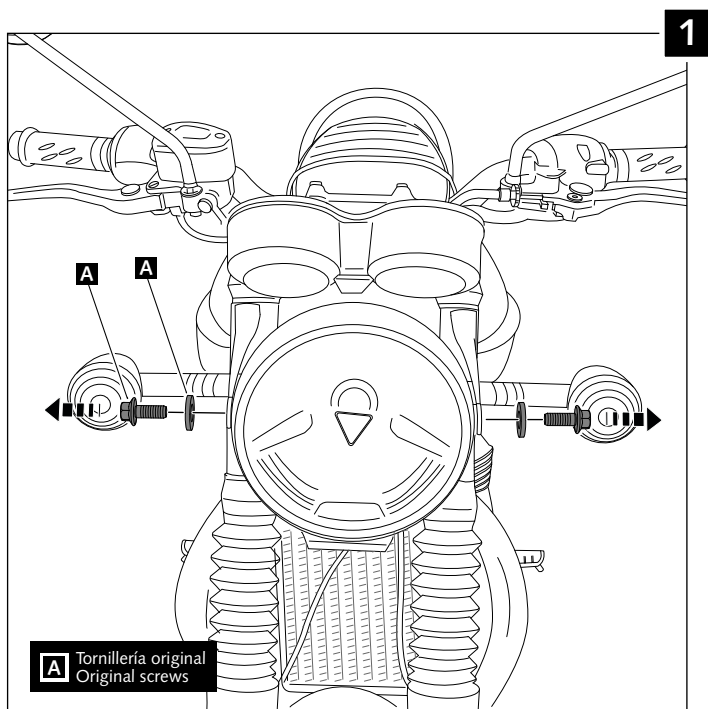

SEMICARENADO RETRO PARA - RETRO WINDSCREEN FOR - WINDSCHUTZSCHEIBE RETRO FÜR  
**TRIUMPH BONNEVILLE T100/T120**


INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

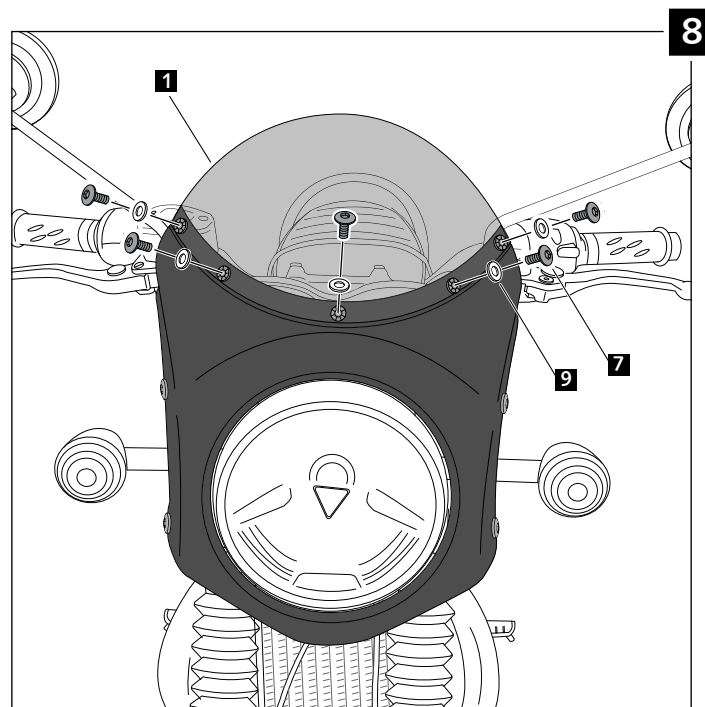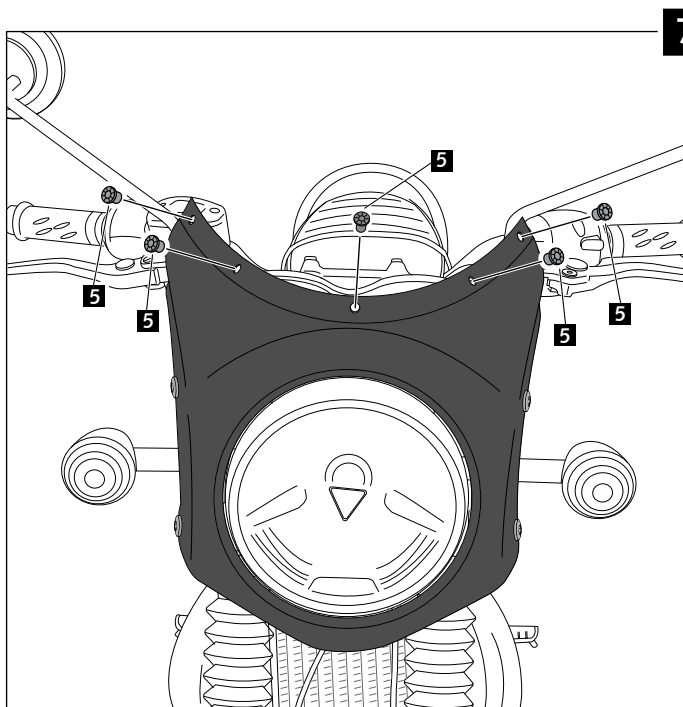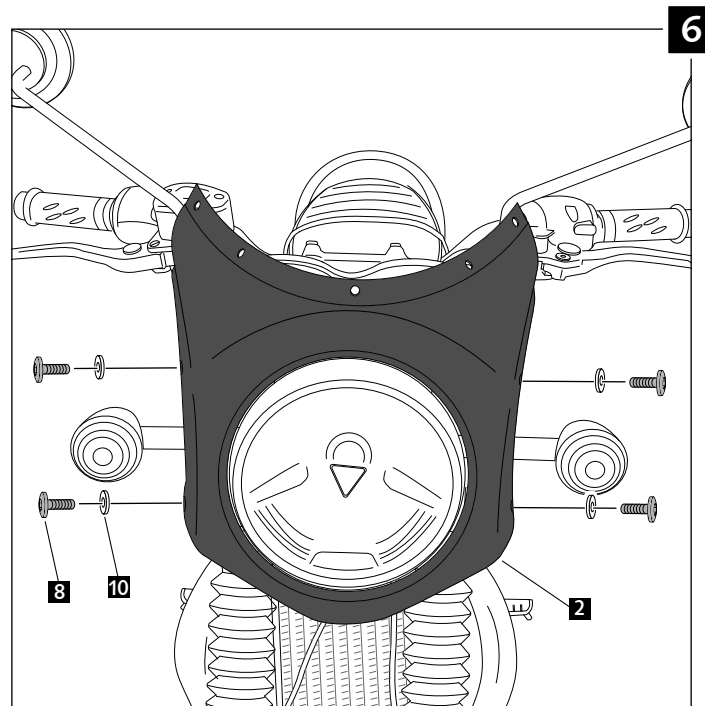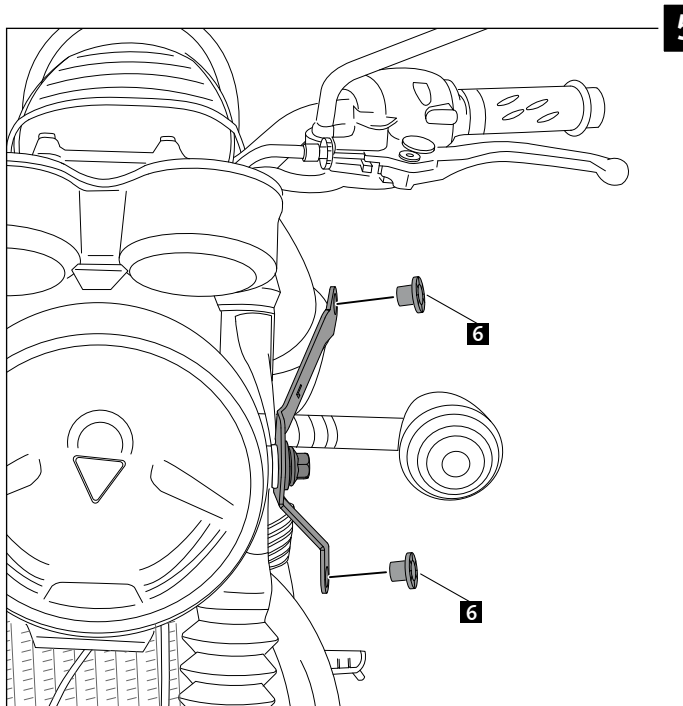

SEMICARENADO RETRO PARA - RETRO WINDSCREEN FOR - WINDSCHUTZSCHEIBE RETRO FÜR  
**TRIUMPH BONNEVILLE T100/T120**


INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

6

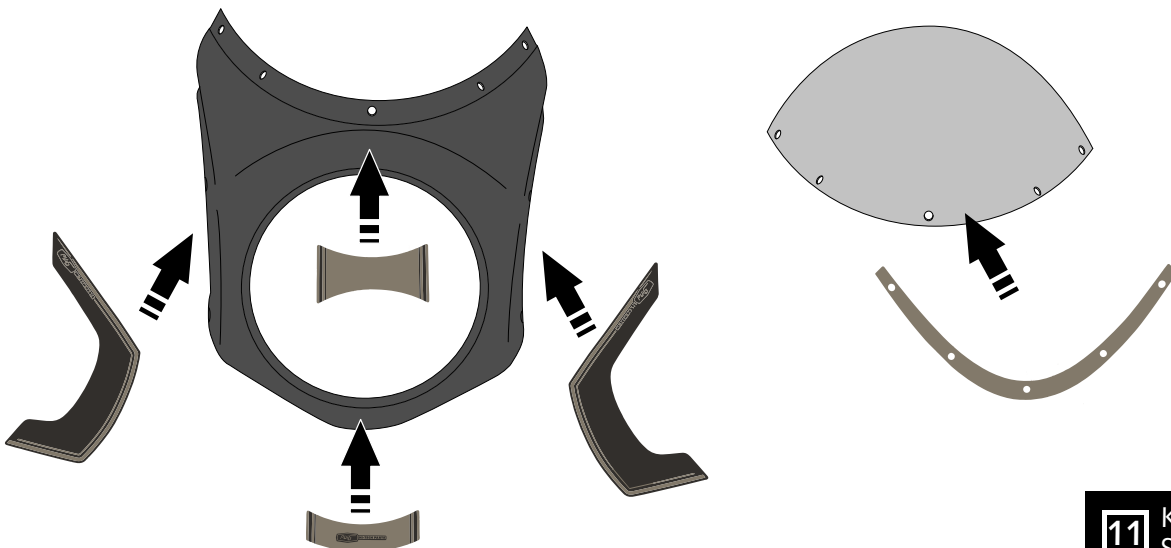

11 Kit adhesivos  
Stickers set

8

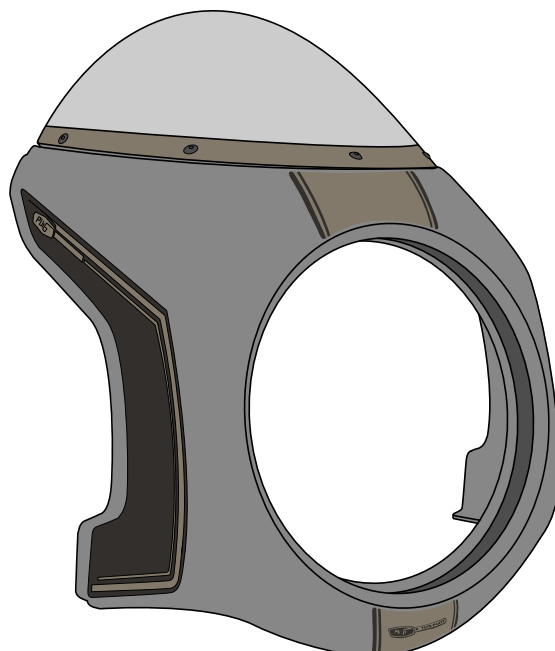

11 Kit adhesivos  
Stickers set